


Q² BOOSTER

Q²BOOSTER should be applied shortly after the primary glass coating dries. It can also be used on already driven coatings, but no later than 2000km after the base glass coating was applied.

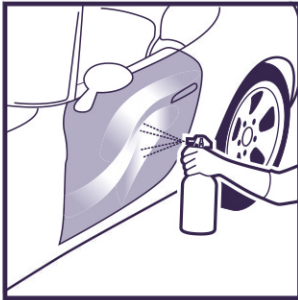


Ensure that the surface is dust free. Apply at least 1 hour after the last coat of the base-coating has been applied. On worn coatings, a ph-neutral wash and use of **Q²M PREP** is recommended.



Apply a moderate amount in a criss-cross motion, forming an even layer. Mind that the coating evaporates rapidly and is hardly visible.



Wipe off immediately after the whole panel has been coated.

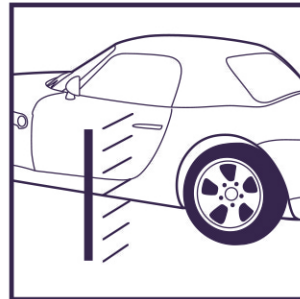

Leave the coat to cure for at least 12 hours before taking the car outside. You can use an IR lamp to speed up curing.